


Throttle Cable Install Bostig v2.0

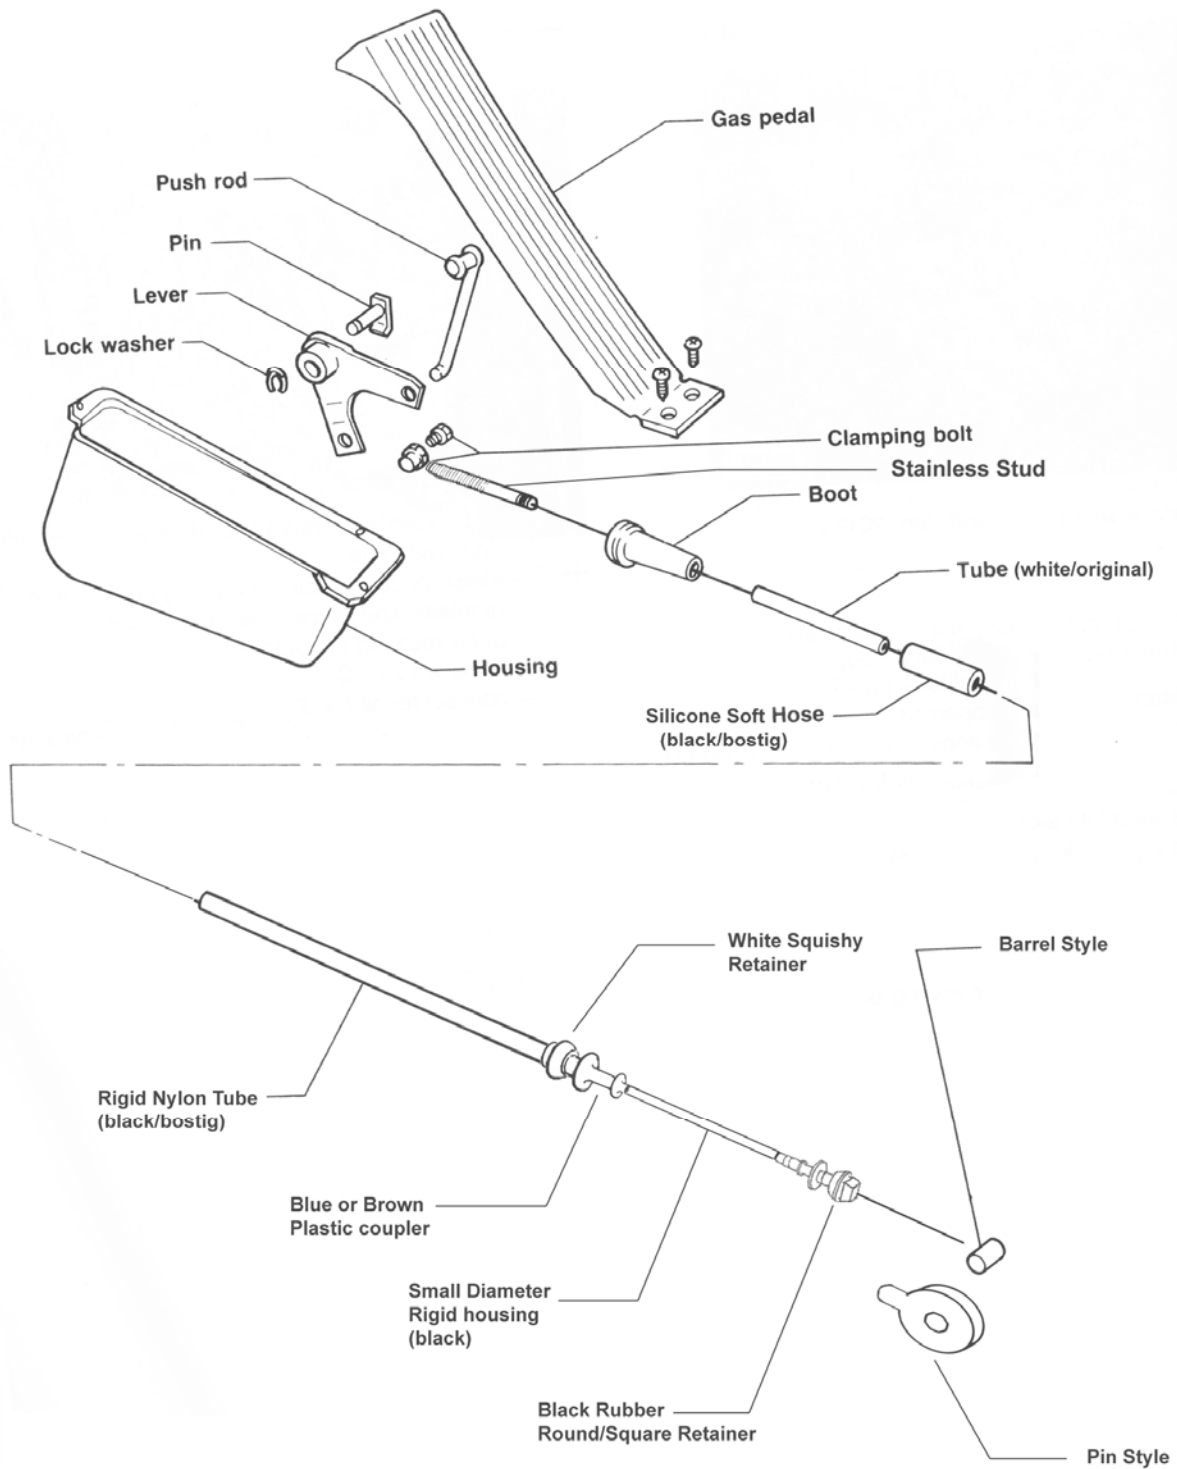

Throttle cable exploded Diagram. Lengths not proportionate.



Start routing at the rear of the van, and work forwards.

This picture shows the Round/Square rubber retainer engaged in the throttle bracket on the throttle body.



This picture shows the throttle cable entering the first cross member from the rear, using the same hole as the original throttle cable did. Note how the white squishy retainer is used against the crossmember.



The cable/rigid black housing then exits the crossmember (this photo taken now looking towards the rear of the van). The rigid black housing is coupled to the old stock white housing with the silicone rubber hose section. In this pic, you can also see the whole assembly is suspended from the original black plastic hanger bracket with a zip tie.

From the white housing forward, the installation isn't affected, and remains the same as stock. Adjustment can be made at the pedal using the stud.